


## Fitting Instructions for RP110SP Roof Penetration Fitting with Single Ply



Fax 0845 6588 980
Email info@nicholsonsts.com
Web www.nicholsonsts.com

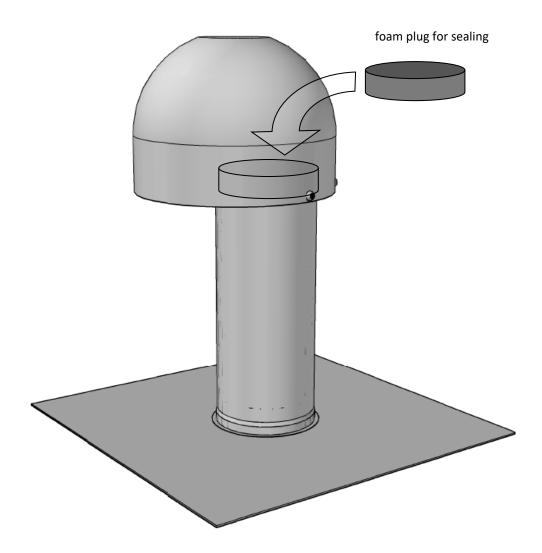

- 1) The RP110SP has a factory fitted single ply flange.
- 2) The unit should be fixed on top of the roofing membrane over an appropriately sized hole and fixed to the roof through the fixing plate located under the flange material using appropriate fixings.
- 3) Once fixed in position, the single ply flange membrane should be lap jointed to the main roof in accordance with the roof system manufacturer's instructions
- 4) Upon completion, check that the four screws holding the weathering cowl in place are fully tightened.

## **MECHANICAL SERVICES ENGINEER**

- 1) The cowl may be removed for easy access and running of cables etc.
- 2) A removable closed cell foam plug is supplied which may be drilled or cut to suit the service penetrations as appropriate.
- 3) The foam plug should be used to protect pipes and cables from the sharp edge of the duct upstand and to seal the neck of the upstand against wind blown dirt and dustl.
- 4) Re secure the cowl and tighten screws. Ensure that the anti slip washers are located between the fastner and the outside of the cowl.
- 5) Ensure that the services run through the unit are sealed appropriately at the vapour contol layer.